



1

Transfer 10 μ L of whole blood or serum or plasma specimen by using a pipette or the dropper provided in the kit, to the sample well (smaller well) .

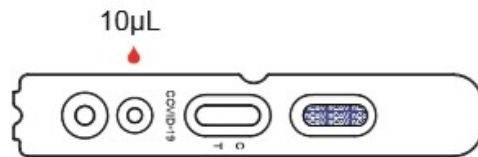

2

Add 80 μ L (approximately 2~3 drops) of buffer to the buffer well (bigger well).

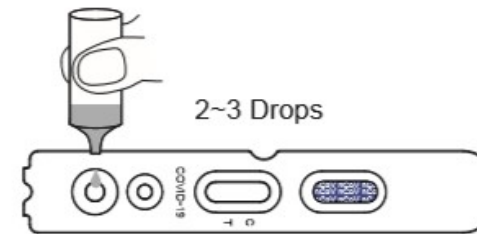

3

Wait for 15 minutes and read the results. Note: Do not read results after 20 minutes, as the result can be inaccurate.



4

Interpretation of Results

